



Parrot FLYPAD Buttons Replacement

This guide will show you how to open the Parrot Flypad, remove its motherboard, and replace the buttons on its faceplate.

Written By: HUY NGUYEN



INTRODUCTION



This guide will show you how to replace the buttons on the front of your Parrot Flypad.



TOOLS:



- [T6 Torx Screwdriver](#) (1)
 - [Magnetic Project Mat](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Buttons

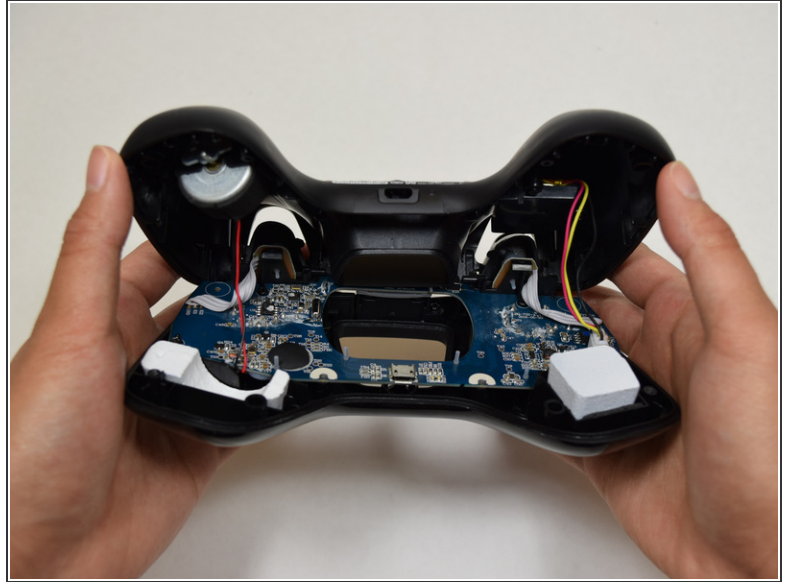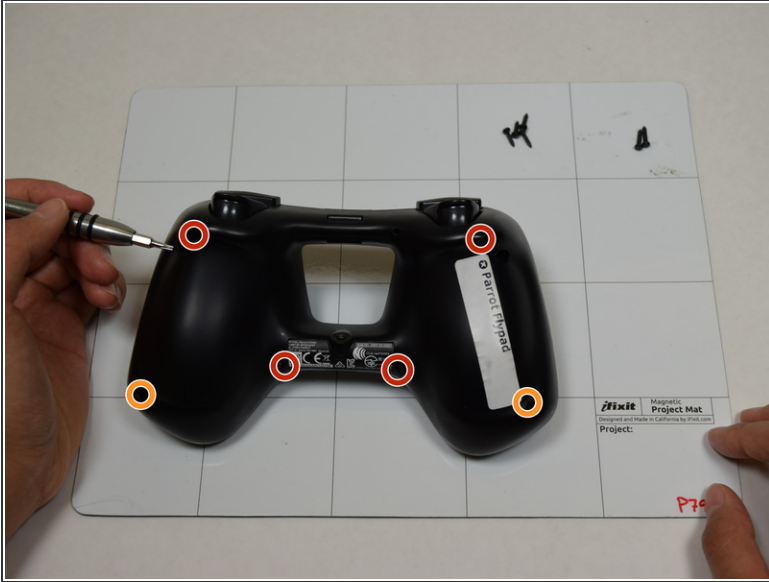



- Position the controller so the back is facing up.
- Use a T6 screwdriver to remove the six screws on the back of the controller: four 0.9 mm screws and two 0.1 mm screws.

Step 2

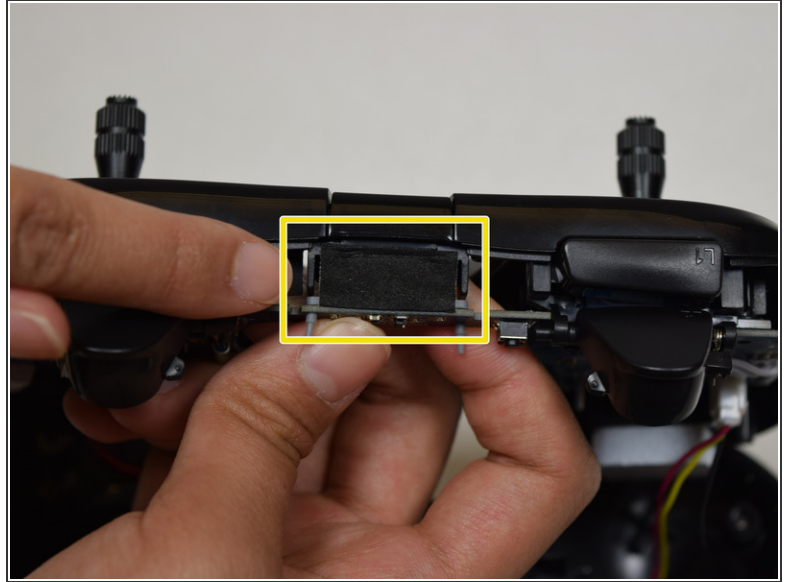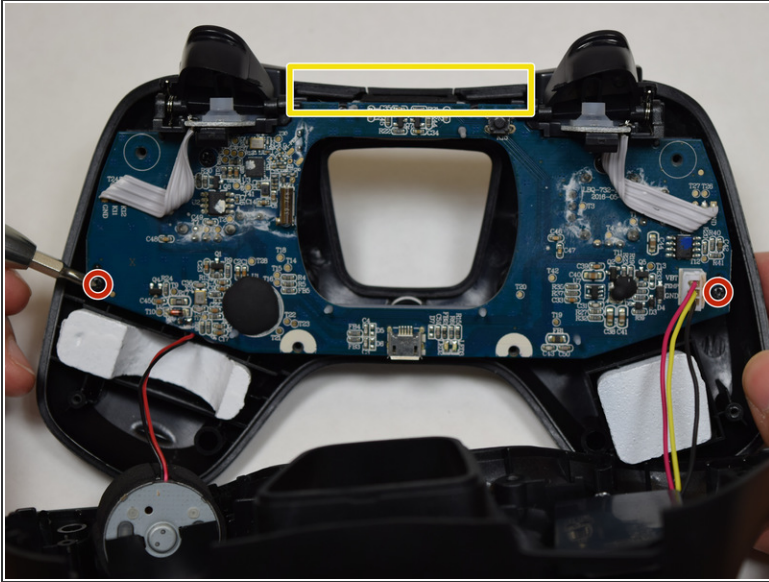

- Remove the foam adhesive that connects the front plate to the motherboard
 - ⓘ The buttons (L1,R1) may fall out. Set aside to replace during reassembly.
- Use a Philips #0 screwdriver to remove the two 0.7 mm screws highlighted.
- Remove the motherboard from the front plate.

Step 3

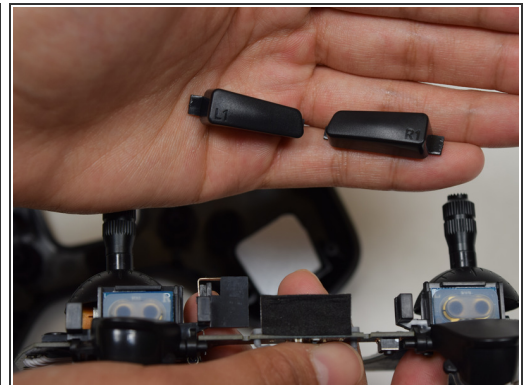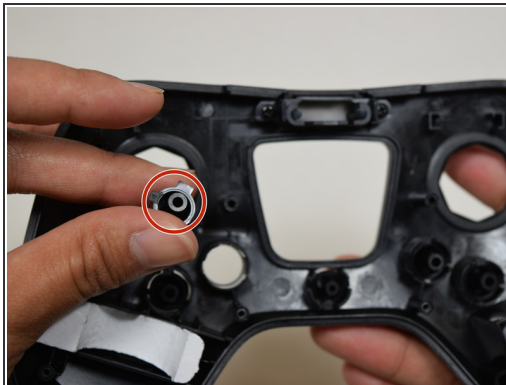

- Remove the buttons from the front plate of the fly pad and replace as needed.
 - ⓘ Hold the front plate of the fly pad facing downwards to prevent buttons from falling out.
 - ⓘ Make sure the text on buttons L1 and R1 correctly line up with L2 and R2 when reassembling the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-03 06:49:35 PM.